
bizhub 4752 — Connect to Wi-Fi

Follow the steps below to connect your Konica bizhub 4752 to a wireless network from the printer's control panel.

1 Open Utility from the home screen.

On the home screen, tap the **Utility** tile (gear icon).

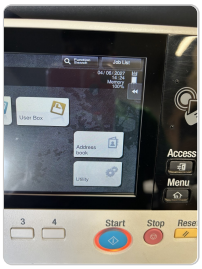


2 Tap Administrator Settings.

From the Utility menu, tap **3 Administrator Settings**.




3 Enter the Administrator password.

Using the on-screen keyboard, enter the password [redacted], then tap **OK**.

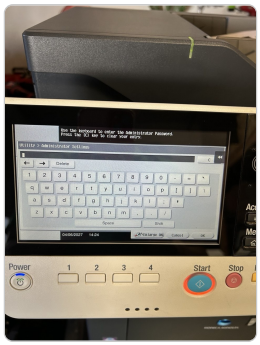


4 Tap Network Settings.

In the Administrator Settings menu, tap **5 Network Settings**.

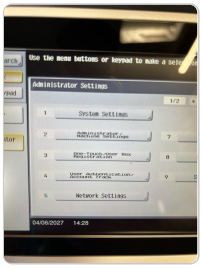


5 Scroll to page 3 and tap Wireless Network Setting.

Use the **Forward** button at the top to scroll to page **3/4**, then tap **6 Wireless Network Setting**.

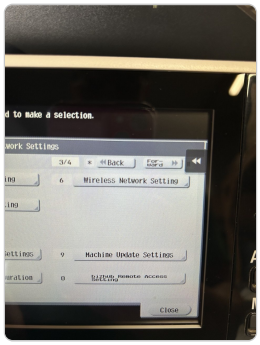


6 Tap Manual Setting.

From the Wireless Network Setting menu, tap **3 Manual Setting**.

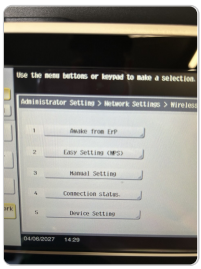


7 Open the Access point list.

On the Manual Setting screen, tap **Access point list** at the bottom.

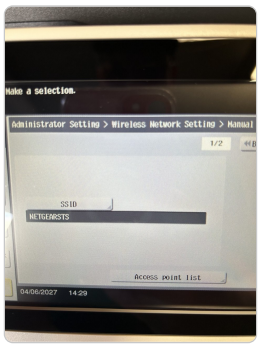


8 Select your network, then tap OK once.

Tap your network's SSID to highlight it, then tap **OK** *only once*. (Tapping OK more than once may exit the screen.)

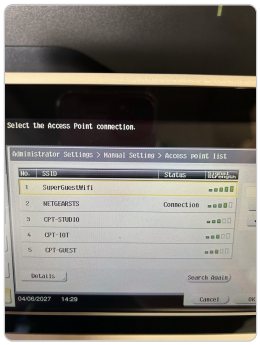


9 Tap Forward in the upper-right.

Back on the Manual Setting screen, tap **Forward** in the upper-right corner to advance to page 2/2.

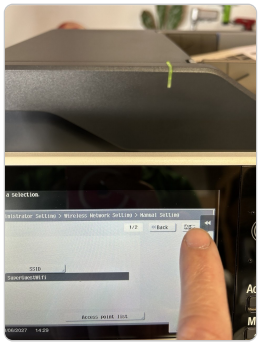


10 Select the highlighted encryption type.

The printer auto-detects your network's encryption — usually **WPA2-PSK(AES)**. Tap the highlighted (yellow-bordered) option to confirm.

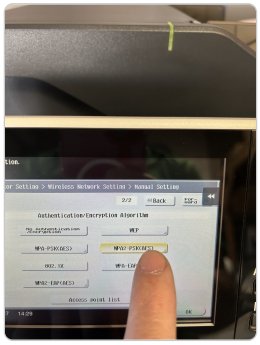


11 Tap the Passphrase field.

On the next screen, tap the black **Passphrase** text box to open the keyboard.

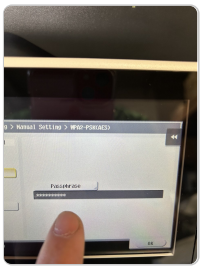

12 Enter the Wi-Fi password twice.

Type the network password into the **Passphrase** field, then tap the **Passphrase confirmation** field and type it again. Tap **OK** when done.

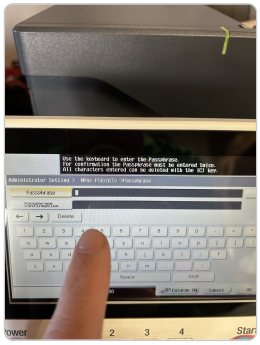


13 Confirm and connect.

Tap **OK** on the next few screens to save and apply the settings. The printer will then attempt to connect to the wireless network — **this can take up to 5 minutes**.

14 Verify the connection.

Once connected, the Access point list will show **Connection** next to your selected network with signal-strength bars.

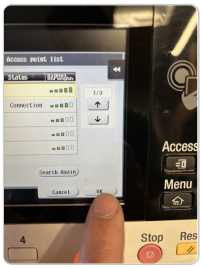

15 Find the printer's IP address.

Return to the home screen and tap **Utility → Device Information** to see the printer's current IP address. You'll need this when adding the printer to your computer.

> **Troubleshooting:** If the printer fails to connect, repeat the process from Step 1 — most failures are caused by an incorrect passphrase or selecting the wrong access point. Verify the SSID, password, and encryption type match your wireless router's settings. Both the printer and your router should remain powered on during the connection attempt.