
bizhub C4050i — Connect to Wi-Fi

Follow the steps below to connect your Konica bizhub C4050i to a wireless network from the printer's control panel.


1 Open Utility from the home screen.

On the home screen, tap the **Utility** tile (gear icon).

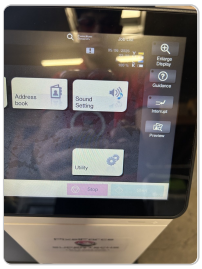


2 Select Administrator.

From the Utility screen, tap the **Administrator** tile.

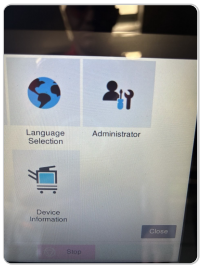


3 Enter the Administrator password.

Using the on-screen keyboard, enter the password [redacted], then tap **OK**.

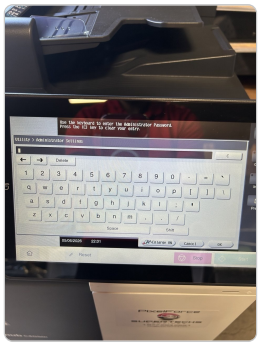


4 Open Network.

From the Administrator HOME menu, tap **Network**.

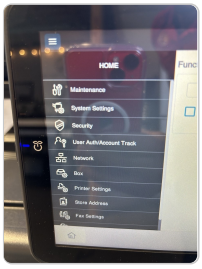


5 Tap Wireless Network Setting.

Scroll if needed, then tap **Wireless Network Setting**.

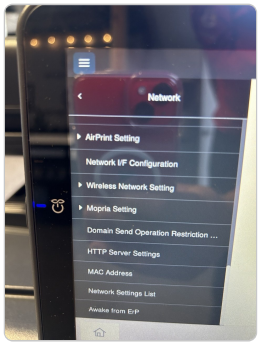


6 Tap Wireless LAN Adapter.

From the Wireless Network Setting menu, tap **Wireless LAN Adapter**.

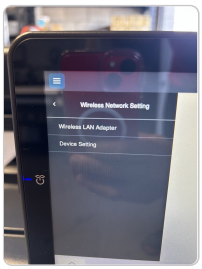


7 Select Direct Input.

Choose the **Direct Input** radio option (this lets you pick the network manually rather than using WPS).

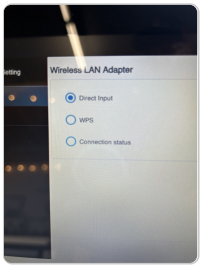


8 Tap AP Search.

On the Wireless LAN Adapter (Direct Input) screen, tap **AP Search** in the upper-right area to scan for nearby networks.

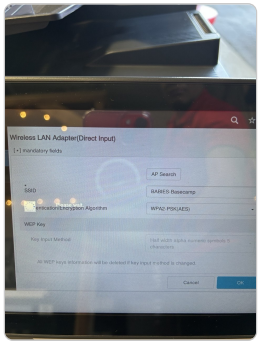


9 Select your network from the AP Search Result List.

Tap your network's **SSID** in the list to highlight it, then tap **OK**. The printer will auto-fill the SSID and encryption type (typically **WPA2-PSK(AES)**) on the previous screen.

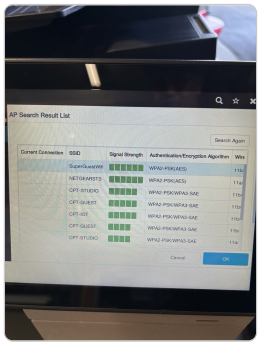

10 Enter the Security key (Wi-Fi password).

Scroll down to the bottom of the page to find the **Security key** section. Tap the **Security key** field and enter your network password, then tap the **Confirm security key** field and enter the same password again. Tap **OK** when done.

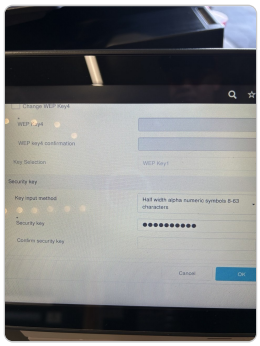


11 Save and connect.

Tap **OK** on any remaining confirmation screens to save and apply the settings. The printer will then attempt to connect to the wireless network — **this can take up to 5 minutes**.

12 Find the printer's IP address.

Once connected, return to the home screen. Tap **Utility → Device Information** to view the printer's current IP address. You'll need this when adding the printer to your computer.

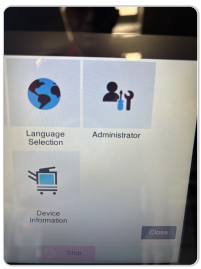

i **Troubleshooting:** If the printer fails to connect, repeat the process from Step 1 — most failures are caused by an incorrect security key or selecting the wrong access point. Verify the SSID, password, and encryption type match your wireless router's settings. Both the printer and your router should remain powered on during the connection attempt.